



Wave Washer

When assembling the tuner, insure that the wave washer is located around the diameter of the string roller spindle and that the worm wheel is seated correctly on the spindle flange. See Below.

